

For the complete PDF manual
please visit www.LaserPros.com.



Service Manual

Lexmark™ W840 Finisher

4024-XXX

- ***Table of contents***
- ***Start diagnostics***
- ***Safety and notices***
- ***Trademarks***
- ***Index***



Lexmark and Lexmark with diamond design are
trademarks of Lexmark International, Inc., registered
in the United States and/or other countries.

Edition: September 8, 2005

The following paragraph does not apply to any country where such provisions are inconsistent with local law:

LEXMARK INTERNATIONAL, INC. PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions; therefore, this statement may not apply to you.

This publication could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in later editions. Improvements or changes in the products or the programs described may be made at any time.

Comments may be addressed to Lexmark International, Inc., Department D22A/032-2, 740 West New Circle Road, Lexington, Kentucky 40550, U.S.A or e-mail at ServiceInfoAndTraining@Lexmark.com. Lexmark may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you. You can purchase additional copies of publications related to this product by calling 1-800-553-9727. In other countries, contact your point of purchase.

References in this publication to products, programs, or services do not imply that the manufacturer intends to make these available in all countries in which it operates. Any reference to a product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any existing intellectual property right may be used instead. Evaluation and verification of operation in conjunction with other products, programs, or services, except those expressly designated by the manufacturer, are the user's responsibility.

Lexmark and Lexmark with diamond design are trademarks of Lexmark International, Inc., registered in the United States and/or other countries.

Other trademarks are the property of their respective owners.

© 2005 Lexmark International, Inc.
All rights reserved.

UNITED STATES GOVERNMENT RIGHTS

This software and any accompanying documentation provided under this agreement are commercial computer software and documentation developed exclusively at private expense.

Table of contents

Notices and safety information	ix
Laser notice	ix
Safety information	xiii
Preface	xvi
Definitions	xvi
General information	1-1
Finisher weight	1-1
Components	1-1
Media size and weight	1-2
Media size/orientation and applicable functions	1-2
Media weight	1-4
Tools required for service	1-4
Features	1-4
Acronyms	1-5
Diagnostic information	2-1
Start	2-1
Using service checks	2-1
Confirm the installation status	2-2
Error code messages	2-3
Service checks	2-11
280.00 Sensor (bridge unit media entrance) on Jam	2-11
280.01 Sensor (bridge unit media entrance) static jam A	2-12
280.02 Sensor (bridge unit media entrance) static jam B	2-13
281.00 Sensor (bridge unit media exit) On Jam A	2-14
281.01 Sensor (bridge unit media exit) On Jam B	2-15
281.02 Sensor (bridge unit media exit) On Jam C	2-17
281.03 Sensor (bridge unit media exit) static jam A	2-18
282.00 Sensor (finisher media entrance) on jam	2-19
282.01 Sensor (finisher media entrance) static jam A	2-21
283.00 Sensor (buffer path) on jam A	2-22
283.01 Sensor (buffer path) on jam B	2-24
283.02 Sensor (buffer path) static jam A	2-26
283.03 Sensor (buffer path) static jam B	2-27
283.04 Sensor (buffer path) static jam C	2-28
284.00 Sensor (lower media exit) off jam A.	2-28
284.01 Sensor (lower media exit) on jam A	2-30
284.02 Sensor (lower media exit) on jam B	2-32
284.03 Sensor (lower media exit) on jam C	2-34
284.04 Sensor (lower media exit) off jam B.	2-36
284.05 Sensor (lower media exit) static jam	2-37
285.00 Finisher eject set jam	2-37
286.00 Sensor (compiler media in) static jam	2-38
287.00 Sensor (upper media exit) on jam A	2-40
287.01 Sensor (upper media exit) off jam A.	2-41
287.02 Sensor (upper media exit) on jam B	2-42
287.03 Sensor (upper media exit) on jam C	2-44
287.04 Sensor (upper media exit) off jam B.	2-45
287.05 Sensor (upper media exit) static jam A	2-46
287.06 Sensor (upper media exit) static jam B	2-47
287.07 Sensor (upper media exit) static jam C	2-48
288.00 Sensor (diverter gate) on jam	2-49
288.01 Sensor (diverter gate) static jam (to top bin) A	2-51

288.02 Sensor (diverter gate) static jam (to top bin) B	2-52
288.03 Sensor (diverter gate) static jam (to top bin) C	2-53
288.04 Sensor (diverter gate) static jam (to stacker bin) A	2-54
288.05 Sensor (diverter gate) static jam (to stacker bin) B	2-55
288.06 Sensor (diverter gate) static jam (to stacker bin) C	2-56
980.02 Finisher communication failure	2-56
981.00 Stacker bin failure	2-57
981.01 Stacker bin upper limit failure	2-59
981.02 Stacker bin lower limit failure	2-60
982.00 Sensor (front tamper HP) on failure	2-62
982.01 Sensor (front tamper HP) off failure	2-63
983.00 Sensor (rear tamper HP) on failure	2-64
983.01 Sensor (rear tamper HP) off failure	2-65
984.00 Sensor (punch unit HP) on failure	2-66
984.01 Sensor (punch unit HP) off failure	2-67
985.00 Sensor (punch carriage shift HP) on failure	2-68
985.01 Sensor (punch carriage shift HP) off failure	2-69
986.00 Sensor (media eject clamp HP) on failure	2-70
986.01 Sensor (media eject clamp HP) off failure	2-71
987.00 Sensor (media eject shaft HP) on failure	2-72
987.01 Sensor (media eject shaft HP) off failure	2-74
988.00 Sensor (punch unit side reg) on failure	2-75
988.01 Sensor (punch unit side reg) off failure	2-76
989.00 Stapler unit failure	2-78
990.00 Sensor (stapler carriage HP) on failure	2-78
990.01 Sensor (stapler carriage HP) off failure	2-79
995.00 Finisher NVRAM R/W failure	2-80
996.00 Finisher type failure	2-80
999.00 Finisher engine/RIP functional failure	2-81
Bridge unit top cover open	2-81
Finisher front door open	2-82
Finisher eject cover open	2-83
Finisher upper media bin full	2-84
No punch waste box.	2-85
Punch waste box full	2-86
Stacker media bin full (mix size)	2-86
Stacker media bin full (no mix)	2-88
Stacker lower safety failure	2-90
Stacker set over count failure	2-92
Staple cartridge empty	2-92

Diagnostic aids 3-1

Accessing Diagnostics mode	3-1
Available finisher tests	3-1
FINISHER TESTS	3-2
Staple Test	3-2
Hole Punch Test	3-2
Feed Tests	3-2
Sensor Test (finisher)	3-2
EXIT DIAGNOSTICS	3-3

Theory	3-4
Media transport	3-4
Bridge unit assembly paper path	3-4
Finisher media path	3-4
Finisher roll assemblies	3-5
Finisher media path sensors	3-5
Finisher motors	3-6
Bridge unit assembly	3-6
From bridge unit assembly to punch	3-7
From punch to compiler unit assembly	3-8
From compiler unit assembly to stacker media bin	3-10
From punch to upper media bin	3-10
Functions of sensors along the media path	3-10
Bridge unit assembly	3-10
Finisher	3-11
Punch unit	3-12
Adjusting punching positions	3-12
Punching	3-13
Detecting punch waste full	3-14
Detecting punch waste box	3-14
Functions of punch sensors/motors	3-14
Compiler unit assembly	3-15
Outline of operation	3-15
Capacity of compiler unit assembly	3-16
Compiler unit assembly operation with multiple media sizes	3-16
Tamping	3-16
Front tamping	3-17
Rear tamping	3-18
Center tamping	3-19
Determining tamper home position	3-19
Tamping	3-19
Offsetting	3-20
Functions of compiler unit assembly sensors/motors	3-20
Stapler	3-21
Stapling operation	3-21
Staple positions	3-21
Media sizes that allow stapling	3-22
Stapling one sheet	3-22
Stapling multiple size media	3-22
Media limits for stapling	3-23
Stapler operation	3-23
Stapler unit assembly	3-24
Functions of stapler sensors/motors	3-24
Upper media bin	3-25
Operation	3-25
Functions of upper media bin sensors	3-25
Stacker media bin	3-26
Operation	3-26
Full stack detection	3-28
Functions of stacker media bin sensors/motors	3-28
Power supply and interlock	3-30

Repair information	4-1
Handling ESD-sensitive parts	4-1
Removal procedures	4-2
Bridge unit assembly removal	4-2
Finisher removal	4-4
Bridge unit rear cover removal	4-6
Bridge unit top cover assembly removal	4-7
Bridge unit drive belt and bridge unit drive pulley removal	4-8
Bridge unit right shaft assembly removal	4-9
Bridge unit left shaft assembly removal	4-10
Bridge unit idler rolls removal	4-11
Bridge unit transport belt removals	4-12
Bridge unit drive motor assembly removal	4-13
Bridge unit entrance guide removal	4-14
Sensor (bridge unit top cover interlock) removal	4-15
Sensor (bridge unit media entrance) removal	4-16
Sensor (bridge unit media exit) removal	4-17
Bridge unit pinch roller removal	4-18
Top cover removal	4-19
Upper media bin assembly removal	4-20
Right eject cover removal	4-21
Stacker media bin assembly removal	4-22
Right lower low voltage power supply (LVPS) cover removal	4-22
Rear lower cover removal	4-23
Rear upper cover removal	4-24
Upper media bin front cover removal	4-25
Switch (finisher front door interlock) removal	4-26
Finisher front door assembly removal	4-27
Left lower cover removal	4-28
Left upper cover removal	4-29
Carriage lift belt left removal	4-30
Carriage lift belt right removal	4-32
Sensor (stacker bin level 1) removal	4-34
Sensor (stacker bin level 2) removal	4-34
Sensor (stacker bin level encoder) removal	4-35
Sensor (stacker bin upper limit) or sensor (stacker bin no media) removal	4-36
Stacker bin lift motor assembly removal	4-38
Punch carriage assembly removal	4-41
Punch carriage shift motor assembly removal	4-43
Sensor (punch unit side registration pair) with bracket removal	4-44
Punch unit assembly removal	4-45
Punch media stop assembly removal	4-46
Punch unit motor assembly removal	4-47
Sensor (punch unit motor encoder) removal	4-48
Sensor (punch hole select), sensor (punch cam front), and sensor (punch unit HP) removal	4-49
Sensor (punch carriage shift HP) removal	4-51
Sensor (punch waste box set) removal	4-52
Sensor (punch waste box full) removal	4-53
Stapler unit frame removal	4-54
Stapler unit assembly removal	4-56
Sensor (stapler carriage HP) removal	4-58
Media eject unit assembly removal	4-59
Sub paddle removal	4-63
Sub paddle drive shaft assembly removal	4-64
Media eject clamp motor assembly removal	4-66
Sensor (media eject clamp HP) removal	4-67
Switch (eject cover interlock) removal	4-68
Media compiler unit assembly removal	4-69
Sensor (front tamper HP) and sensor (rear tamper HP) removals	4-72

Sensor (compiler media in) removal	4-73
Media eject shaft assembly removal	4-74
Clamp paddle removal	4-76
Media eject clutch removal	4-77
Media eject motor assembly removal	4-78
Sensor (media eject shaft HP) removal	4-79
Sensor (lower media exit) removal	4-80
Lower media exit roll assembly removal	4-82
Paddle and roll exit assembly removal	4-86
Lower pinch guide assembly removal	4-90
Media diverter gate removal	4-91
Buffer diverter gate removal	4-92
Sensor (buffer path) removal	4-93
Buffer roll assembly removal	4-94
Buffer pinch guide assembly removal	4-96
Media entrance pinch guide assembly removal	4-97
Sensor (finisher media entrance) removal	4-98
Media entrance roll assembly removal	4-99
Drive motor (entrance/paddle) and belt (entrance/paddle) removal	4-100
Media diverter gate solenoid removal	4-102
Buffer diverter gate solenoid removal	4-103
Sensor (upper media exit) removal	4-104
Upper media exit pinch roll assembly removal	4-105
Upper media exit roll assembly removal	4-106
Sensor (upper media bin full) removal	4-108
Upper pinch guide assembly removal	4-109
Sensor (diverter gate) removal	4-110
Upper media transport roll assembly removal	4-111
Drive motor (exit) assembly and belt (exit) removal	4-113
Drive motor (buffer/transport) and belt (buffer/transport) removal	4-115
Bridge unit interface card assembly removal	4-117
Finisher controller card assembly removal	4-118
Finisher low voltage power supply (LVPS) removal	4-119
Component locations	5-1
Locations	5-1
Bridge unit assembly	5-1
Stacker lift and stapler	5-2
Punch unit	5-3
Diverter and media eject	5-4
Media eject and media compiler	5-5
Buffer, upper exit, lower exit, and drive motors	5-6
Cabling	5-7
Electronic component diagram	5-10
Preventive maintenance	6-1
Safety inspection guide	6-1
Maintenance recommendations	6-1

Parts catalog	7-1
How to use this parts catalog	7-1
Assembly 1: Bridge unit	7-2
Assembly 2: Bridge unit top cover assembly	7-3
Assembly 3: Bridge unit lower assembly	7-4
Assembly 4: Covers	7-6
Assembly 5: Covers and front door	7-8
Assembly 6: Stacker bin lift	7-10
Assembly 7: Punch	7-12
Assembly 8: Stapler	7-14
Assembly 9: Media eject	7-16
Assembly 10: Eject and compiler unit	7-18
Assembly 11: Lower exit drive	7-20
Assembly 12: Buffer and entrance drive	7-22
Assembly 13: Buffer, transport, and upper drive	7-24
Assembly 14: Electronics	7-26
Assembly 15: Cables 1	7-28
Assembly 16: Cables 2	7-30
Assembly 17: Cables 3	7-31
Index	I-1
Part number index	I-7

For the complete PDF manual
please visit www.LaserPros.com.